




Installation Instructions for ISO FO3 & FO7 Interface to A500 Series Actuators

2 Otter Court, Raymond, New Hampshire 03077 • Tel. (603) 895-4761 • FAX (603) 895-6785

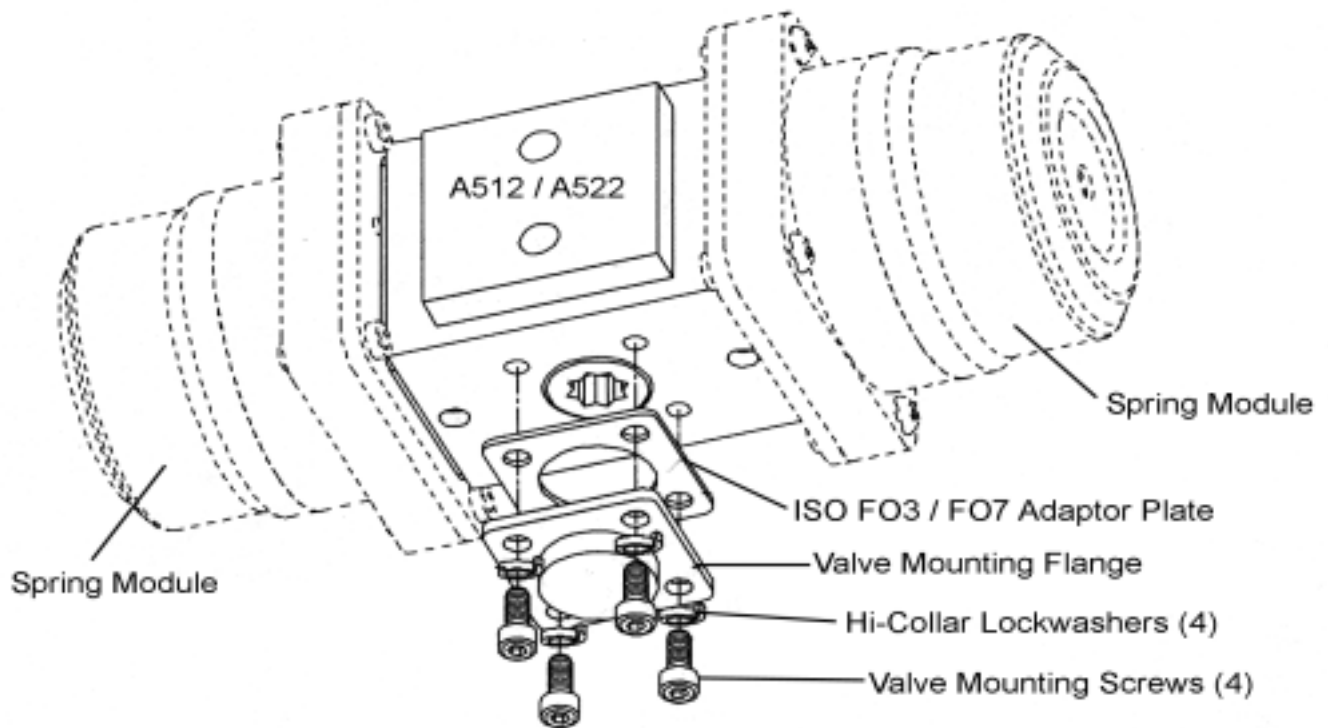

1. Position the ISO FO3 Adaptor Plate (A512 models) or ISO FO7 (A522 models) between the Valve Mounting Flange and the Actuator Body as shown above.

2. Place the Hi-Collar Washers onto the Valve Mounting Screws and secure the valve to the

baseNote:the PMK-A510FO3-K and or PMK-A520FO7-K includes:

- (1) ISO Adaptor Plate
- (4) Hi-Collar Lockwashers

The Mounting Kit(s) do not include the (4) M5 x .8mm Valve Mounting Screws due to varia-

tions in valve mounting flange thicknesses among valve manufacturers. The actuator Valve Mounting Holes are 9mm (.354 inches) deep. Determination of the proper Valve Mounting Screw length is the responsibility of the user. of the actuator.

Notes: The ISO 5211.2 FO7 specifications allow for 11mm, 14mm & 17mm female square drivers. Gemini utilizes the 14 mm. The ISO 5211.2 FO3 standard is 9mm.